

Glass-to-Glass Hinge CAT. No. CARO2

Edge Mount Preferred Method Edge Mount Alternate Method Inset Mount Method Transom Mount Method

1/8" (3mm) to 3/16" (5mm) clearance Page 4H-26 1/8" (3mm) to 3/16" (5mm) clearance ... Page 4H-27 1/8" (3mm) to 3/16" (5mm) clearance ... Page 4H-28

*Maximum	5/16" (8mm) Glass		3/8" (10mm) Glass	
Door Capacities	Weight Width		Weight Width	
Using 2 Hinges	100 lbs.(46 kg)	31"(787mm)	100 lbs.(46 kg)	31"(787mm)

*NOTE: Do not exceed either maximum weight or width when choosing proper quantity of hinges.

Important Information:

Template Options: The Glass-to-Glass Mount CAR02 Hinge offers numerous choices of templates. Refer to the lower left hand corner of this page for the various selections. If using an Edge Mount Template, the capabilities of your temperer may determine your choice of Preferred or Alternate Methods. The Preferred Method has a full leg cutout that allows a full length vertical seal on the hinge side. The Alternate Methods all have a short leg cutout, resulting in an interrupted seal.

The Inset Mount Template is beneficial for two reasons. It allows a full length vertical seal. Also, by insetting the hinge a certain distance towards the center of the door, it enables the door to avoid hitting a towel bar, or some other protrusion from the wall.

Optional Pivot Pins: Optional 5° Pivot Pins (Cat.. No. P1VP1N) are sold as a set, one pin for the top hinge and one pin for the bottom hinge. These 5° offset Pivot Pins allow the installer to adjust the closing position of the door 5° inwards or outwards.

Specifications:

Glass Sizes: 5/16" (8mm) to 3/8" (10mm) thick tempered safety glass

Construction: Solid brass

Closing Type: Self-centering when within 15° of closed position

Cutout Required

Includes: Gaskets, screws and template

Use of Gaskets:

For 5/16"(8mm) Glass: Use one thick gasket and one thin gasket on each side

For 3/8"(10mm) Glass: Use one thick gasket on each side


Recommendations:


For public safety, we recommend the use of only tempered safety glass. Do not use power tools when installing these hinges.

Maintenance Guidelines:

• Never use an abrasive cleaner on the hardware. Many of the components are coated with a clear lacquer that will be irreparably damaged if subjected to harsh, abrasive chemicals. Advise your customer that drying the hardware with a clean, soft towel on a daily basis is the best way to maintain the hardware. If mineral deposits build-up, mix a couple of drops of a mild liquid soap (such as Ivory or a similar product) into a cup of warm water. Using a soft, non-abrasive cloth, clean the hardware. Rinse thoroughly with clean, warm water and dry.



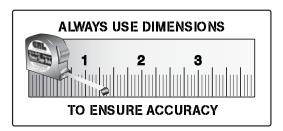

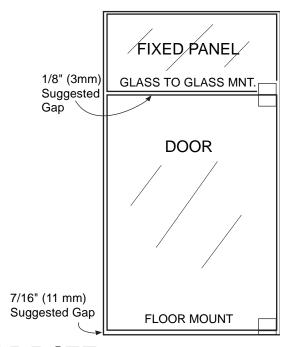


CARDIFF

Glass-to-Glass Hinge CAT. No. CARO2

Edge Mount Preferred Method

1/8" (3mm) to 3/16" (5mm) clearance


IMPORTANT:

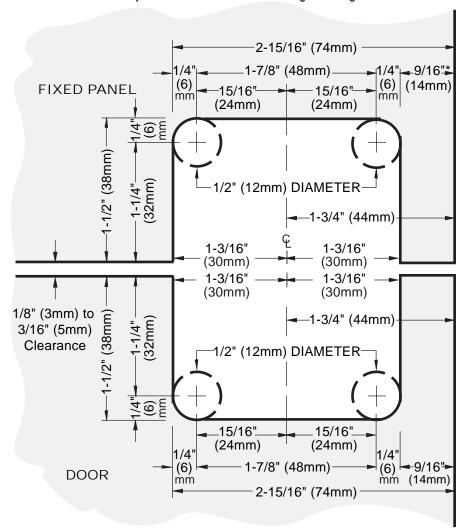

* The 9/16" (14mm) measurement is ok as long as the fixed panel side clearance is the same as the door side clearance. If not, make the appropriate add-on or deduction.



ALWAYS USE DIMENSIONS 1 2 3 TO ENSURE ACCURACY

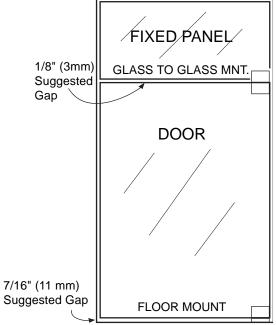


CARDIFF

Glass-to-Glass Hinge Cat. No. CARO2

Edge Mount Alternate Method

1/8" (3mm) to 3/16" (5mm) clearance


IMPORTANT:

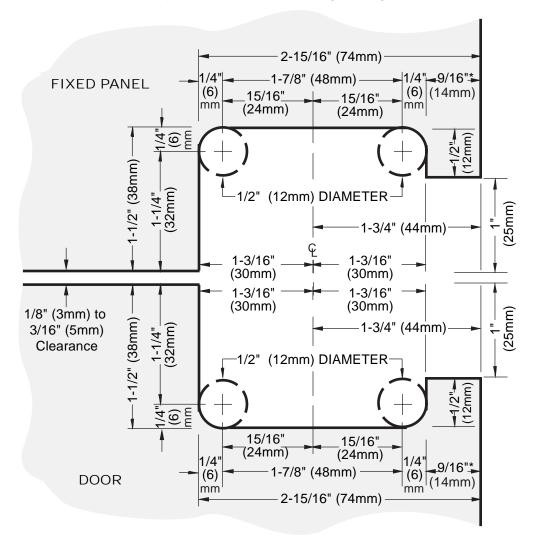

* The 9/16" (14mm) measurement is ok as long as the fixed panel side clearance is the same as the door side clearance. If not, make the appropriate add-on or deduction.



ALWAYS USE DIMENSIONS TO ENSURE ACCURACY

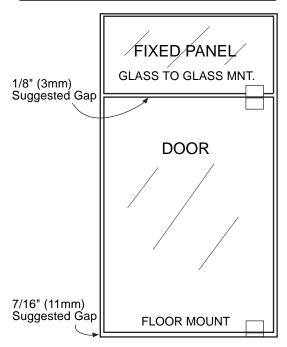


CARDIFF

Glass-to-Glass Hinge CAT. No. CARO2

Inset Mount Method

1/8" (3mm) to 3/16" (5mm) clearance


IMPORTANT:

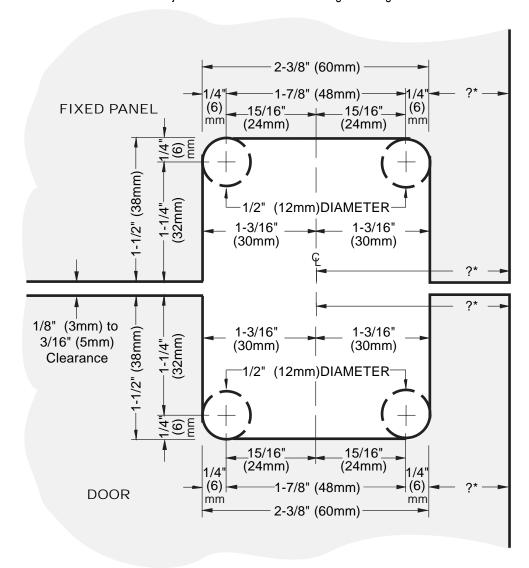

^{*}This measurment varies depending on the amount of inset you desire.



ALWAYS USE DIMENSIONS 3 TO ENSURE ACCURACY

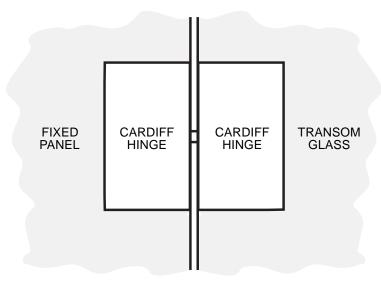


CARDIFF

Glass-to-Glass Hinge CAT. No. CARO2

Transom Mount Method 1/8" (3mm) to 3/16" (5mm) clearance

IMPORTANT:

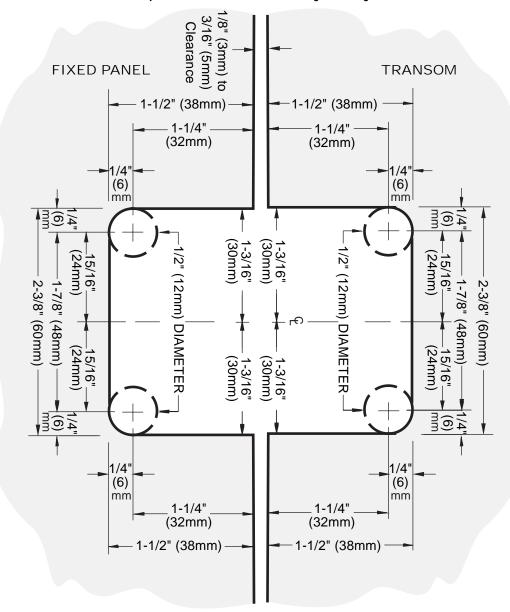



C.R. Laurence Company has established a Technical Sales Department to assist our customers. If you have any questions concerning shower door hardware or any product from CRL, please contact us at:

(800) 421-6144 in the U.S.,
or (877) 421-6144 from Canada,
and ask for Extension 7740